




### How does it work?

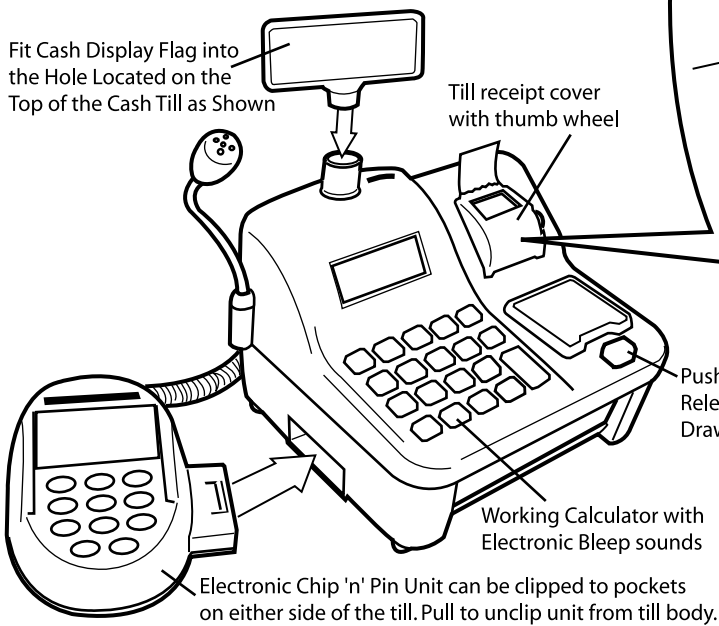

#### Installing the Till Roll

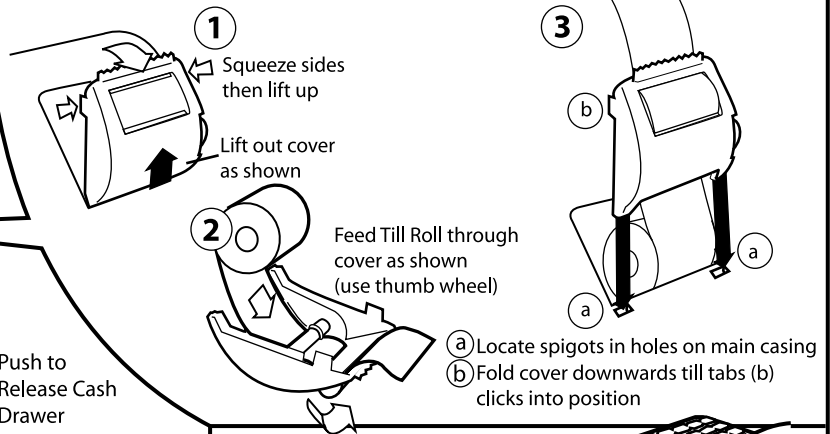


Chip 'n' Pin unit can also be mounted on the opposite side as shown.

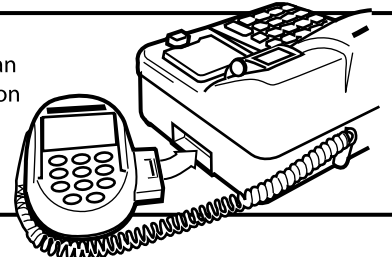


### Using the Chip 'n' Pin unit


1. Ensure that batteries are installed in the Chip 'n' Pin unit & it is turned on. (Battery cover and on/off switch located underneath unit).
2. Select a Card and push it into the card slot, ensuring that the notches are pointing downwards. The YELLOW LED lights up and Beeps once.
3. Using the keypad, enter the 4 digit PIN number that corresponds with your Card & press the enter key. If an incorrect PIN number is entered, the RED LED will be lit followed by 4 rejection Beeps & the user will have to re\_enter the correct PIN number. If the correct PIN number is entered the GREEN LED will be lit with 2 confirmation Beeps. The card can now be removed.

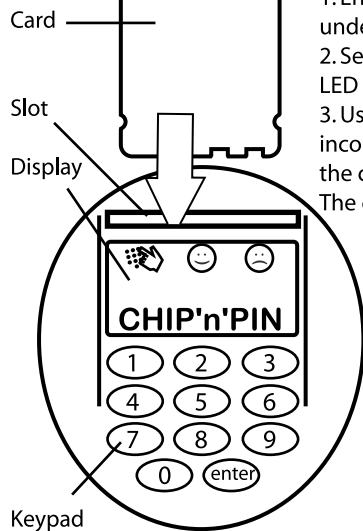

### Card PIN numbers

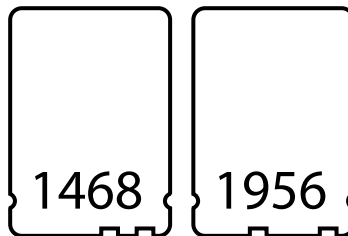

### Assembly of Play Cartons

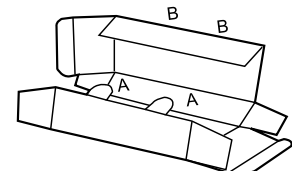

- 1 Press out carton along semi-punched lines
  - 2 Fold along all crease lines
  - 3 Position tabs 'A' to slits 'B' & carefully press home
- The Inks used are harmless but children under 36 months are likely to chew and spoil these boxes

#### WARNING

Unsuitable for children under 36 months due to small components that may prove a choking hazard.  
CORD ENTANGLEMENT HAZARD, KEEP AWAY FROM YOUNG CHILDREN, DO NOT PLACE AROUND NECK!

The normal function of this product may be disturbed by strong electromagnetic interference.  
If so, simply reset the product to resume normal operation by removing the batteries and re-installing them.  
If in the event that the normal functionality doesn't resume, please try and use the product in another location.

#### DANGER

Children may try to fill these Containers with the real product. For the sake of safety and hygiene this practice must be forbidden!

### Installing Batteries (ADULTS ONLY)

Remove the battery compartment cover (positioned under both the till & the Chip 'n' Pin unit) by unfastening the pozi-screw.

Install 3x AA/ UM-3/ LR6 batteries for the Till & 2x AA/ UM-3/ LR6 batteries for the Chip 'n' Pin unit; ensuring they are placed with polarities matching the diagrams located on the battery compartments (Fig 1) (Fig2).

The use of alkaline batteries is recommended for maximum performance.

**Replace the battery cover(s) & fasten the pozi\_screw.**

This symbol indicates that this product should not be treated as normal household waste. It should be recycled, so please take it to an approved collection facility.

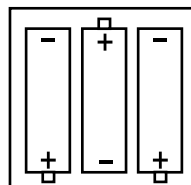


FIG 1 (Till)

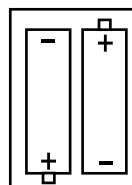


FIG 2 (Chip 'n' Pin unit)

### Battery Notice

Install the batteries correctly observing the polarity (+) and (-) signs to avoid leakage.

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Different types of batteries or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited.

